



MODEL SPECIFIC GUIDE

D-Ring Hinge Version

Model 4010 Toyota Tundra Ext Cab
6.5' Short Bed 2000-2006 (with rail caps only)




MODEL SPECIFIC GUIDE D-Ring Hinge Version

Model 4010 Toyota Tundra 6.5' Short Bed 2000-2006

RE: Step 2 on the Quick Start Guide


Measurement for the rear mounting bracket is $48\frac{7}{8}$ " from the back side of the bulkhead to the front edge of the bracket.

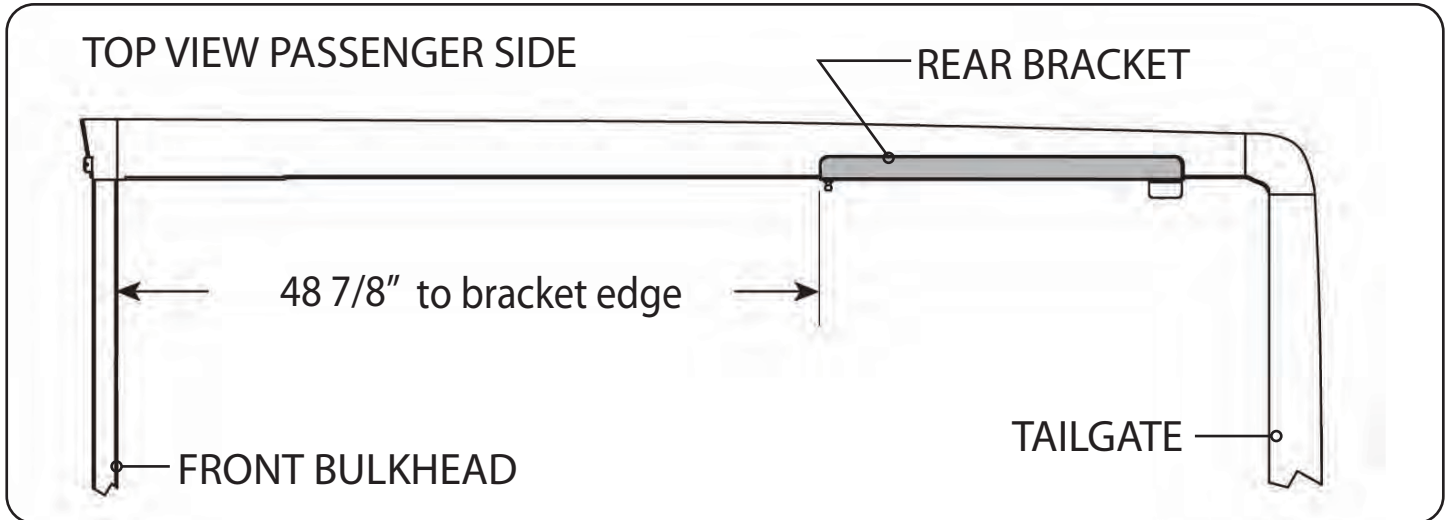

RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is $\frac{3}{8}$ " gap overhang from the front edge of the bracket to the front edge of the bulkhead.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

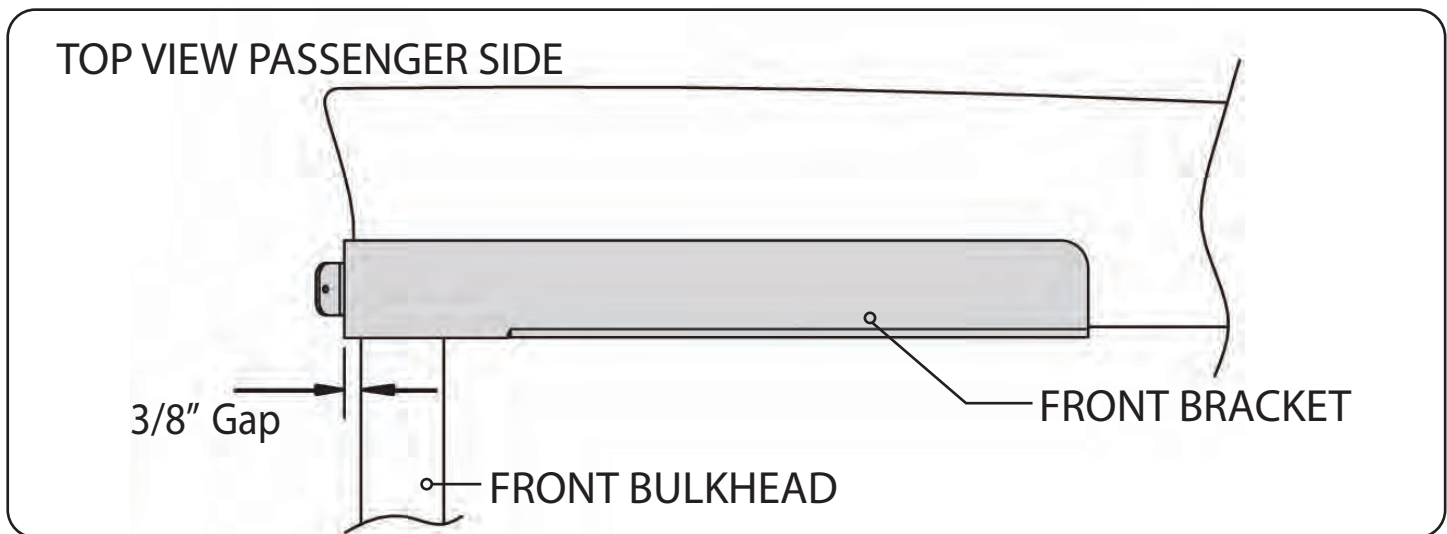

UnderCover, Inc.
P.O. Box 620
Rogersville, MO 65742
(417) 753-8000
(866) 900-8800

www.undercoverinfo.com
sales@undercoverinfo.com